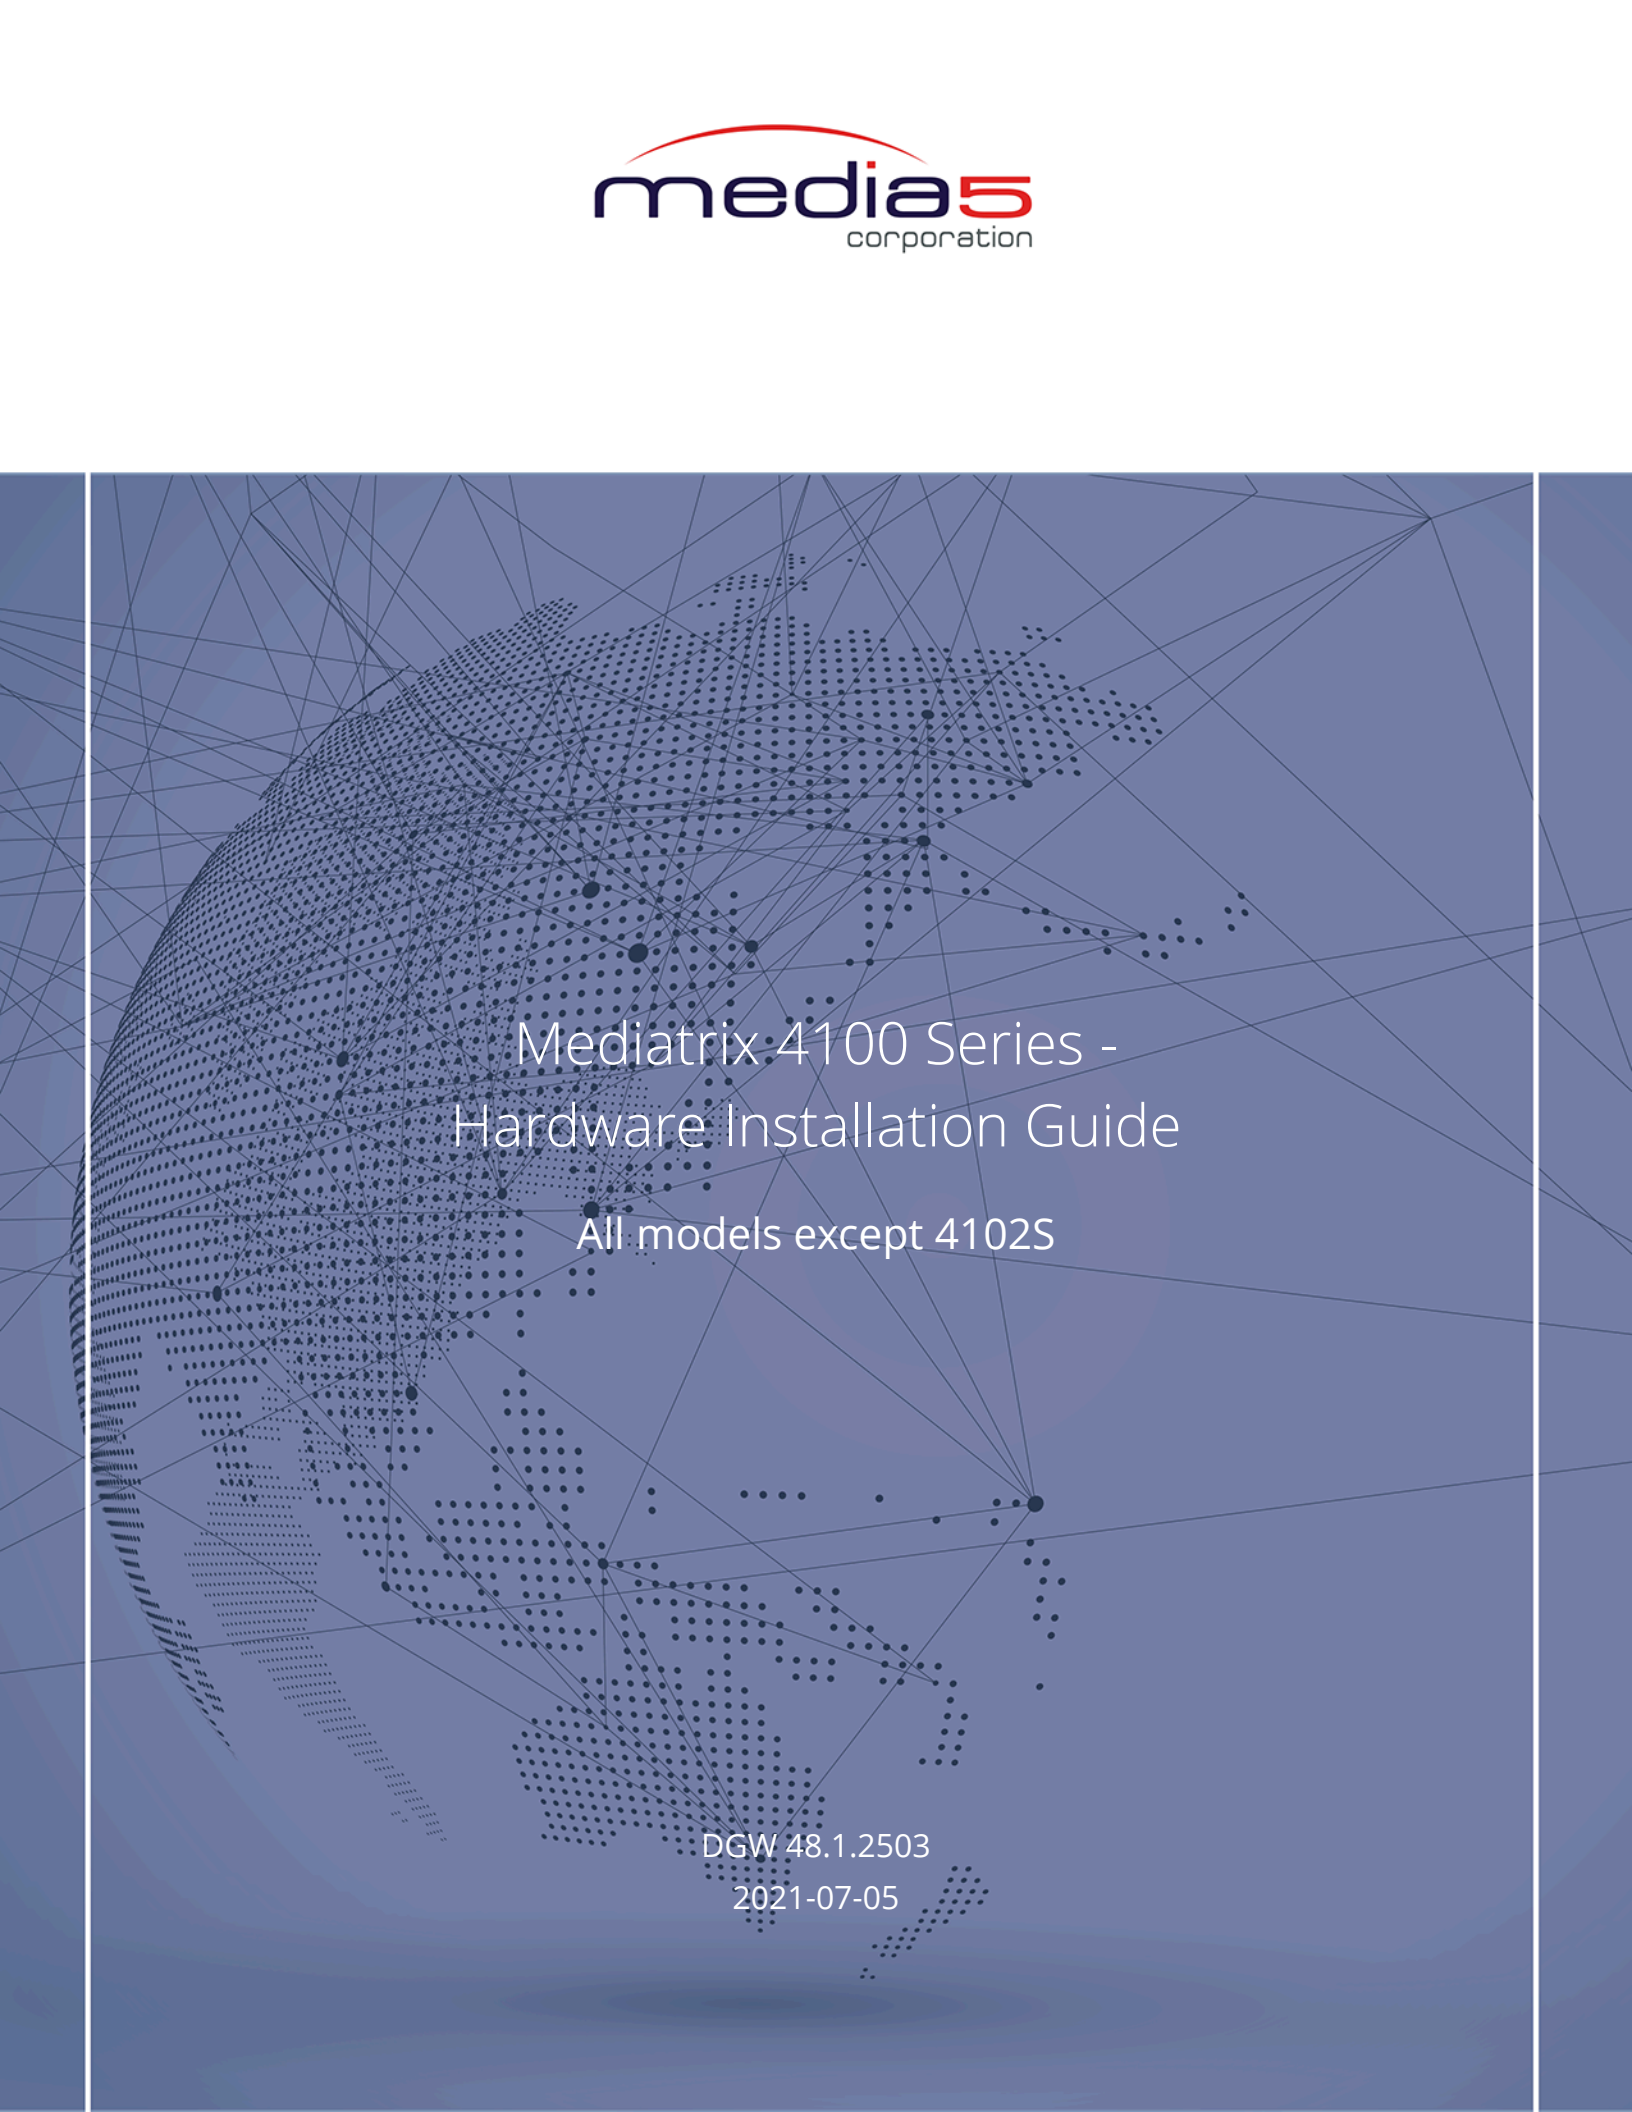


The background of the page is a dark blue gradient with a complex, abstract graphic. It consists of a dense network of thin, light blue lines connecting numerous small black dots. These dots are arranged in a way that suggests a globe or a network map, with some areas being more densely populated than others. The overall effect is a high-tech, digital aesthetic.

Mediatrix 4100 Series - Hardware Installation Guide

All models except 4102S

DGW 48.1.2503
2021-07-05

Table of Contents

Safety Recommendations and Information	4
Danger, Warning, Caution, and Note Definitions	4
Electrical Safety Guidelines	4
General Safety Practices	5
Electrostatic Discharge Prevention	6
Translated Warning Definition	6
Requirements	8
Location Requirements	8
Wiring Guidelines	9
Mediatrix 4100 Series Characteristics	9
Power Consumption	10
Getting Started	11
Installation Check List	11
Package Check List	12
Cleaning Instructions	12
Mounting Tools and Equipment	12
Connectors and Indicators	13
Bypass Feature (4108/4116/4124 Models)	15
Installing the Mediatrix Unit	16
Installing the Unit on a Flat Surface	17
Installing the Unit on the Wall	17
Connecting the Telephony Cables	18
Connecting the Mediatrix Unit Using a DHCP Server	18

Connecting the Mediatrix Unit Using a Static IP Address	19
Verifying the Installation	20
Cables	21
10/100 Ethernet Connection (RJ-45)	21
FXS Connections (RJ-11)	22
FXS Connections (RJ21X) for Mediatrix 4124 only	23
Troubleshooting	25
Locating the Product Serial Number	25
Troubleshooting	26
LED Patterns	26
RESET/DEFAULT Button	27
Partial Reset	28
Factory Reset	32
Standards Compliance and Disclaimers	34
Supported Standards	34
Disclaimers	37
Product Disposal Instructions	39
DGW Documentation	40
Copyright Notice	41

Safety Recommendations and Information

Danger, Warning, Caution, and Note Definitions



Danger: Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



Warning: Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



Caution: Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury or damage to property or equipment.

Note: Indicates important information not related to personal injury.

Electrical Safety Guidelines



Danger: Do not work on the Mediatrix unit, connect or disconnect its cables during periods of lightning.



Danger: Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.



Warning: Disconnect all interface cables (including FXS,) before unplugging any power sources from the Mediatrix unit.



Warning: Disconnect all interface cables (including FXS,) as well as all power sources connected to the Mediatrix unit before servicing the unit.



Warning: This equipment must be installed and maintained by service personnel. Incorrectly connecting this equipment to a general-purpose outlet could be hazardous.



Warning: This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that a fuse or circuit breaker no larger than 120 VAC, 15 A U.S. (240 VAC, 10 A international) is used on the phase conductors (all current-carrying conductors).



Warning: The unit must be grounded at all times when in use.



Warning: Do not connect the ETH2, ETH1, LAN, and FXS connectors directly to the Public Switched Telephone Network (PSTN), to an off premise application, an out of plant application, any exposed plant application, or to any equipment other than the intended application, connection may result in a safety hazard, and/or defective operation and/or equipment damage. Exposed plant means where any portion of the circuit is subject to accidental contact with electric lighting or power conductors operating at a voltage exceeding 300 V between conductors or is subject to lightning strikes.



Warning: The Mediatrix unit must be installed on a circuit equipped with a breaker so that you can easily power the unit off if required.



Warning: Hazardous network voltages might be present in WAN, LAN, Sync, and telephony port connectors regardless of whether power to the device is OFF or ON. Use caution when working near these connectors to avoid electric shocks.



Warning: The socket outlet, if used, shall be located near the equipment and shall be easily accessible by the user. The AC adaptor inlet is considered as a disconnection device. The device must be readily operational.



Caution: To reduce the risk of fire, use only No. 26 AWG or larger telecommunication line cords.



Caution: The RJ-11 cable should comply with UL 1863 and CSA C22.2 No 233 standards.

General Safety Practices



Warning: Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.



Warning: Do not expose the unit to rain or moisture to avoid any shock hazard.



Warning: Do not use the telephone to report a gas leak in the vicinity of the leak.



Warning: Do not get this product wet or pour liquids into it.



Warning: Ultimate disposal of this product should be handled according to all national laws and regulations.



Caution: Unit main become very hot in case of fan failure or during intensive use. To avoid any accidental burns, it is important to restrict the physical access to the unit, and to shut it down for 30 minutes before touching it. In case of fan failure, please contact Media5 or your authorised reseller or vendor.



Caution: If the unit is installed in a closed environment or on a multi-unit rack, the ambient temperature of the environment next to the Media5 unit may become greater than the maximum operating temperature recommended by Media5 for the use of its units, i.e. 40°C. The Mediatrix unit should never be used to temperatures greater than the recommended maximum operating temperature. Any damage occurring in such environmental conditions will void the warranty.

- Keep your Mediatrix unit clear and dust-free during and after installation.
- Locate the emergency power-off switch for the room in which you are working. Then, if an electrical accident occurs, you can act quickly to turn off the power.
- Do not work alone if potentially hazardous conditions exist.
- Never assume that power is disconnected from a circuit. Always check.
- Do not perform any action that creates a potential hazard to people or makes the equipment unsafe.
- Do not open or disassemble this product.
- The unit should be located at 20 cm from your monitor, computer casing or other peripheral including speakers.
- When the unit is brought from a cold to a warm environment, condensation, that might be harmful to the unit, may occur. If this is the case, wait one hour before powering the unit.

Electrostatic Discharge Prevention

- When working on a Mediatrix unit, always wear an ESD wrist strap, ensuring that it makes a good contact with your bare skin.
- Attach the ESD wrist strap end to an earth ground i.e. the grounding screw on the back of the Mediatrix unit or on an unpainted bare metal spot of a grounded equipment rack.

Translated Warning Definition



Warning: Means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, you must be aware of the hazards involved with electrical circuitry and familiar with standard practices for preventing accidents.



Attentie: Dit waarschuwingssymbool betekent gevaar. U overtreedt in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij elektrische schakelingen betrokken risico's en dient u op de hoogte te zijn van standaard maatregelen om ongelukken te voorkomen.



Varoitus: Tämä varoitusmerkki merkitsee vaaraa. Olet tilanteessa, joka voi johtaa ruumiinvammaan. Ennen kuin työskentelet minkään laitteiston parissa, ota selvää sähkökytkentöihin liittyvistä vaaroista ja tavanomaisista onnettomuuksien ehkäisykeinoista.



Avertissement: Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant causer des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers posés par les circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents.



Warnung: Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu einer Körperverletzung führen könnte. Bevor Sie mit der Arbeit an irgendeinem Gerät beginnen, seien Sie sich der mit elektrischen Stromkreisen verbundenen Gefahren und der Standardpraktiken zur Vermeidung von Unfällen bewußt.



Avvertenza: Questo simbolo di avvertenza indica un pericolo. La situazione potrebbe causare infortuni alle persone. Prima di lavorare su qualsiasi apparecchiatura, occorre conoscere i pericoli relativi ai circuiti elettrici ed essere al corrente delle pratiche standard per la prevenzione di incidenti.



Advarsel: Dette varselsymbolet betyr fare. Du befinner deg i en situasjon som kan føre til personskade. Før du utfører arbeid på utstyr, må du være oppmerksom på de faremomentene som elektriske kretser innebærer, samt gjøre deg kjent med vanlig praksis når det gjelder å unngå ulykker.



Aviso: Este símbolo de aviso indica perigo. Encontra-se numa situação que lhe poderá causar danos físicos. Antes de começar a trabalhar com qualquer equipamento, familiarize-se com os perigos relacionados com circuitos eléctricos, e com quaisquer práticas comuns que possam prevenir possíveis acidentes..



Aviso: Este símbolo de aviso significa peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considerar los riesgos que entraña la corriente eléctrica y familiarizarse con los procedimientos estándar de prevención de accidentes.



Varning - risk för maskinskada: Denna varningssymbol signalerar fara. Du befinner dig i en situation som kan leda till personskada. Innan du utför arbete på någon utrustning måste du vara medveten om farorna med elkretsar och känna till vanligt förfarande för att förebygga skador.

Requirements

Location Requirements

To avoid premature aging of the unit, insure user security and facilitate access, upgrades and maintenance, the following guidelines must be followed.

- Install the Mediatrix unit:
 - on a standard 48.26 cm (19 in.) equipment rack
 - on a flat surface (desk, table, etc.)
- Install the Mediatrix unit in a well-ventilated location where it will not be exposed to high temperatures or humidity.
 - Storage temperature: -20°C to +70°C
 - Operating temperature: 0°C to +40°C



Caution: If the unit is installed in a closed environment or on a multi-unit rack, the ambient temperature of the environment next to the Media5 unit may become greater than the maximum operating temperature recommended by Media5 for the use of its units, i.e. 40°C. The Mediatrix unit should never be used to temperatures greater than the recommended maximum operating temperature. Any damage occurring in such environmental conditions will void the warranty.

- Humidity lower than 85% and non-condensing
- Do not install the Mediatrix unit in a location exposed to direct sunlight or near stoves or radiators. Excessive heat could damage the internal components.
- Unit should be positioned to be accessible for future upgrade, maintenance and troubleshooting and where cables can be easily connected.
- Maintain a minimum of 25 mm (1 in.) clearance in front, in the back, on top, and on the sides of the unit.
- Access to the unit should be restricted to avoid any accidental physical contact, as unit can become very hot.
- Keep airflow around and through the vents of the unit clear of any obstruction.
- Do not put books or paper on the unit.

Wiring Guidelines

These guidelines apply for any cable, supplied or not, used with a Mediatrix unit.

- Always use straight through cables.
- Cables must not pull or create a lateral stress on the connectors, i.e. they must be long enough.
- Cables must be installed in such a way not to present a trip hazard to personnel working in the vicinity of the equipment.
- Keep cables away from:
 - Sources of electrical noise such as radios, transmitters, and broadband amplifiers
 - Power lines
 - Fluorescent lighting fixtures
 - Liquids or moisture
 - Heat sources

Mediatrix 4100 Series Characteristics

Parameter	Description
Dimensions	• Height: 4.4 cm (1.74 in.) • Width: 43 cm (17.19 in.) • Depth: 21 cm (8.4 in.)
Weight	• 1.7 kg (3.7 lbs)
Power consumption	• 100 Vac - 240 Vac • 50 Hz / 60 Hz 1.6 A

Power Consumption

Model	Voltage / Frequency	Operating Conditions	Current (mA)	Power (W)	VA	Thermal Dissipation
4108	120 Vac / 60 Hz	All ports off hook	226	18	27	17
	240 Vac / 50 Hz	All ports off hook	176	20	42	19
	120 Vac / 60 Hz	All ports ringing into 3REN each	306	25	37	15
	240 Vac / 50 Hz	All ports ringing into 3REN each	233	28	56	18
4116	120 Vac / 60 Hz	All ports off hook	368	30	44	28.5
	240 Vac / 50 Hz	All ports off hook	274	34	66	32.5
	120 Vac / 60 Hz	All ports ringing into 3REN each	532	43	64	23.5
	240 Vac / 50 Hz	All ports ringing into 3REN each	341	43	82	23.5
4124	120 Vac / 60 Hz	All ports off hook	540	41	65	41
	240 Vac / 50 Hz	All ports off hook	360	41	86	41
	120 Vac / 60 Hz	All ports ringing into 3REN each	580	37	70	37
	240 Vac / 50 Hz	All ports ringing into 3REN each	500	37	120	37

Getting Started

Installation Check List

Task	Verified by	Date
Network information available and recorded in site log.		
Location requirements verified.		
Site power Voltage.		
Installation site pre-power check completed.		
Mounting tools and equipment available.		
Additional equipment available.		
Mediatrix unit received.		
Regulatory compliance and safety information received.		
Software version verified		
Rack, desktop mounting of chassis completed.		
Initial electrical connections established.		
Cable length limits verified.		
Initial configuration performed.		
Initial operation verified.		

Package Check List

Item	Condition
1 Mediatrix unit	
1 Power cord with the proper model for the country	
1 Printed flyer	
1 Bumpon kit for desktop use	

Cleaning Instructions

To clean a Mediatrix unit, wipe with a soft dry cloth.



Caution: Do not use volatile liquids such as benzine and thinner as they can damage the unit's casing.

For resistant markings, wet a cloth with a mild detergent, wring well and then wipe off. Use a dry cloth to dry the surface.

Mounting Tools and Equipment

Tools

- ESD wrist strap

Equipement

- RJ-45 cables for the WAN and LAN connections
- RJ-11 cable for telephony connections (for the 4108 and 4116)
- RJ-21 cable (only for 4124)

Connectors and Indicators

LEDs



#	LED	Behavior	Condition
7	Ready	Green, steady ON	All lines are enabled (operational state)
		OFF	All lines are disabled (operational state)
		Blinking 1 cycle per 4 seconds, 75% duty	At least one line is enabled and at least one line is disabled (operational state)
8	In-Use	OFF	Lines idled and unlocked
		Steady ON	Lines in use and unlocked
		Steady yellow	Shutting down
		Yellow, blinking yellow, 1 cycle per second, 50% duty	Locked
9	LAN	Green, blinking, variable rate	Network traffic
		Green, steady ON	No network traffic
		OFF	Not connected
10	Power	Amber, steady ON	Restart completed
		OFF	Indicates that the unit is not connected
		Blinking, 1 Hz, 50% duty	Restart in progress

Switches



#	Switch	Description
11	Reset/Default	Allows setting the unit to default (known) values. Refer to RESET/DEFAULT Button (p.27)

Connectors and cards

#	Connectors/ cards	Description
1	ETH1	A 10/100 BaseT Ethernet RJ-45 connector for access to a LAN, WAN or computer. This port is by default used for uplink / WAN connection.
2	ETH2	10/100 BaseT Ethernet RJ-45 connector for access to a LAN, WAN or computer. These ports are used by default for LAN connections.
3	FXS connectors	Eight RJ-11 connectors to attach conventional telephones or G3 fax machines. These connectors are available on the Mediatrix 4116 only.
4	Analog Lines	A RJ21X connector with 24 RJ-11 Teladapt connectors to provide line cord connection to analog phones, faxes and modems. This connector is available on the Mediatrix 4124 only.
5	FXS connectors	Eight RJ-11 connectors to attach conventional telephones or G3 fax machines. These connectors are available on the Mediatrix 4108 and Mediatrix 4116 only.
6	Bypass	Permits users to make and receive calls even when the Mediatrix 4100 is not operating.
12	Power	Internal Switching Mode Power Supply (SMPS) Universal input.

Bypass Feature (4108/4116/4124 Models)

In the event of a power failure or network failure, the bypass feature allows users to make and receive calls even when the Mediatrix unit is not operating

During normal operation, the direct connection between the FXS 1 and FXS 2 connectors is switched out through commuting relays and both ports resume normal functions. When power is removed from the Mediatrix unit or if the Network is down, a phone/fax used on FXS connector 1 (Mediatrix 4108/4116) or analog line 1 (Mediatrix 4124) is directly connected to the SCN Bypass line. FXS connector 1 (Mediatrix 4108/4116) or analog line 1 (Mediatrix 4124) stays in Bypass connection until:

- The error conditions have been cleared.
- The device connected to it is on-hook and a delay has elapsed.

When the power is restored, this automatically removes the Bypass connection; this means that any ongoing call on the Bypass connection is terminated.

Installing the Mediatrix Unit

Before you start



Warning: Before performing this procedure, you must first read and understand the Safety Recommendations listed in this document.

Note: Note or take a picture of your unit's serial number before starting the installation, and place the card stickers of the cards not factory installed. Refer to [Locating the Product Serial Number](#) (p.25)

Steps

- 1) Install the unit on a flat surface, in an equipment rack or on the wall. Refer to [Installing the Unit on a Flat Surface](#) (p.17) or [Installing the Unit on the Wall](#) (p.17)



Caution: If the unit is installed in a closed environment or on a multi-unit rack, the ambient temperature of the environment next to the Media5 unit may become greater than the maximum operating temperature recommended by Media5 for the use of its units, i.e. 40°C. The Mediatrix unit should never be used to temperatures greater than the recommended maximum operating temperature. Any damage occurring in such environmental conditions will void the warranty.

- 2) Connect the unit power cord in an appropriate AC electrical outlet.
- 3) Connect the Telephony Interface Cables. Refer to [Connecting the Telephony Cables](#) (p.18) .



Caution: To prevent damage to the Mediatrix unit, make sure to connect the cables to their proper location on the Mediatrix unit.

- 4) Connect the Ethernet Cables. Refer to:
 - [Connecting the Mediatrix Unit Using a DHCP Server](#) (p.18)
 - [Connecting the Mediatrix Unit Using a Static IP Address](#) (p.19)
- 5) Verify the installation. Refer to [Verifying the Installation](#) (p.20).

Installing the Unit on a Flat Surface

Before you start



Warning: Before performing this procedure, you must first read and understand the Safety Recommendations listed in this document.

Steps

- 1) Unpack the unit and go through the [Package Check List](#) (p.12)
- 2) Apply the Bumpon™ autoadhesive protective products to the bottom of the unit.

Note: This will improve the airflow under the unit.

- 3) Install the unit on a flat surface.
- 4) Make sure the unit is at 20 cm (8 in.) from your monitor, computer casing, or other peripheral, including speakers.

Next Step

[Connecting the Telephony Cables](#) (p.18)

Installing the Unit on the Wall

Before you start

IMPORTANT: Before performing this procedure, you must first read and understand the Safety Recommendations listed in this document.

Information

Consider writing down the Product Serial Number on a document easy to access before performing the installation of the unit. Refer to [Locating the Product Serial Number](#) (p.25)

Steps

- 1) Unpack the unit and go through the [Package Check List](#) (p.12)
- 2) Do not connect any cables to the unit.
- 3) Make sure the wall is smooth, flat, dry and sturdy.

Note: If necessary, install a 250 mm x 200 mm x 12 mm (10 in. x 8 in. x 0,5 in.) plywood on the wall.

- 4) Apply the Bumpon™ autoadhesive protection to the bottom of the unit.

Note: This will improve the airflow under the unit.

- 5) Position the unit against the wall (plywood).

- 6) Mark the position of the screw holes on the wall.
- 7) Drill two holes on the markings.
- 8) Install a screw in each hole.
- 9) Align the screw holes of the unit over the screws installed on the wall, and hang the unit.

Next Step

[Connecting the Telephony Cables](#) (p.18)

Connecting the Telephony Cables

Information

Note: To prevent damage to the Mediatrix unit, make sure to connect the cables to their proper location on the Mediatrix unit.

Steps

- 1) Wear an ESD wrist strap, ensuring it makes good contact with your bare skin.
- 2) Attach the ESD wrist strap end to an earth ground (grounding screw on the back on the Mediatrix unit or unpainted bare metal spot of a grounded equipment rack).
- 3) Make sure the unit's power switch is OFF.
- 4) Make sure the circuit breakers of AC power sources used to power the Mediatrix unit are OFF.
- 5) Connect faxes, phones or a PBX to the FXS card.

Next Step

[Connecting the Mediatrix Unit Using a DHCP Server](#) (p.18)

[Connecting the Mediatrix Unit Using a Static IP Address](#) (p.19)

Connecting the Mediatrix Unit Using a DHCP Server

Before you start

- Make sure that your network connection is working.
- You must use an IPv4 Network.
- The IPv4 Network must have a DHCP server.
- If your unit does not have an FXS port, or if you do not have access to the DHCP server's logs, then use the [Connecting the Mediatrix Unit Using a Static IP Address](#) (p.19) procedure.

Steps

- 1) Wear an ESD wrist strap, ensuring it makes good contact with your bare skin.

- 2) Attach the ESD wrist strap end to an earth ground (unpainted bare metal spot of a grounded equipment rack).
- 3) Make sure the circuit breakers of AC power sources used to power the Mediatrix unit are OFF.
- 4) Make sure the provided power cable is connected to an appropriate AC electrical outlet.
- 5) Connect a 10/100 BaseT Ethernet RJ-45 cable into the **ETH1** connector of the Mediatrix unit.
- 6) Connect the other end of the cable to a router/switch connected to your Network.
- 7) Validate the installation.
- 8) Turn ON the AC power sources that are used to power the Mediatrix unit at the circuit breaker

Note: When the unit is brought from a cold to a warm environment, condensation, that might be harmful to the unit, may occur. If this is the case, wait one hour before connecting the power cord.

- 9) If you have an FXS port, dial ***#*0** to get the IP address or consult the DHCP server's logs to find out your IP address.

Result

The Power LED on the unit will be flashing when the unit performs a DHCP server query. It will become solid once it successfully gets an IP address from the DHCP server. At this point, you can now use the DHCP server IP address to access your unit's management interface.

Connecting the Mediatrix Unit Using a Static IP Address

Before you start

- Your computer must be set to use the 192.168.0.11 private IP address on subnet 255.255.255.0.
- You must use an IPv4 Network.
- Make sure that your network connection is working.

Steps

- 1) Wear an ESD wrist strap, ensuring it makes good contact with your bare skin.
- 2) Attach the ESD wrist strap end to an earth ground (unpainted bare metal spot of a grounded equipment rack).
- 3) Make sure the circuit breakers of AC power sources used to power the Mediatrix unit are OFF.
- 4) Make sure the provided power cable is connected an appropriate AC electrical outlet.
- 5) Connect a 10/100 BaseT Ethernet RJ-45 cable into the **ETH2** Ethernet connector of the Mediatrix unit.
- 6) Connect the other end of the cable into your PC.
- 7) Validate the installation.

- 8) Turn ON the AC power sources that are used to power the Mediatrix unit at the circuit breaker.

Note: When the unit is brought from a cold to a warm environment, condensation, that might be harmful to the unit, may occur. If this is the case, wait one hour before connecting the power cord.

Result

You can now use the 192.168.0.10 IP address to access your unit's management interface.

Verifying the Installation

Steps

- 1) Contact the Mediatrix unit via the Web Browser, or go to step 2
 - a) In your Web browser, enter the IP address used by your Mediatrix unit to communicate with the Web interface.
 - If your computer is connected to the Ethernet port, commonly used to be connected to the Local Area Network (LAN), i.e. ETH2 on most devices, use the 192.168.0.10 IP address
 - If your Mediatrix unit is configured to use a DHCP server with IPv4, use the provided DHCP server IP address.
 - b) Enter **public** as your username and leave the password field empty.

Note: The **public** username account has administrator rights.

Note: You can also use **admin** as a username and **administrator** as password.

- c) Click **Login**.
- 2) Contact the Mediatrix unit with an SNMP browser, or
- 3) Contact the Mediatrix unit via the CLI, or
- 4) Ping the Mediatrix unit.


Cables

10/100 Ethernet Connection (RJ-45)



Caution: Always use standard telecommunication cables with a minimum of 26 AWG wire gauge.

- Category 5 cables can be used for 10/100 Base T-Connections.
- It is possible to use either a crossover or a straight Ethernet cable as the Mediatrix units perform automatic MDI/ MDIX detection, meaning that they adapt to the type of cables connected to them. The Auto MDI/ MDIX feature only works when the unit are configured in auto detect mode, which is the default mode.

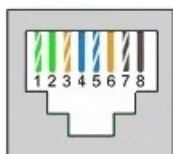

Pin	Name	Description	TIA/EIA 568A	TIA/EIA 568B
1	BI_DA+/Tx+	Bi-directional pair A+ (Transmit+)	white/green	white/orange
2	BI_DA-/Tx-	Bi-directional pair A- (Transmit-)	green	orange
3	BI_DB+/Rx+	Bi-directional pair B+ (Received+)	white/orange	white/green
4	not used			
5	not used			
6	BI_DB-/Rx-	Bi-directional pair B- (Receive -)	orange	green
7	not used			
8	not used			

FXS Connections (RJ-11)




Caution: The RJ-11 cable should comply with UL 1863 and CSA C22.2 No 233 standards.



Caution: Use standard telecommunication cables with a minimum of 26 AWG wire gauge.

Note: The maximum standard FXS cable length is 450 m.


The RJ-11 pair of wires is wired so that pins 3 and 4 are connected to the Ring and Tip, which meets the EIA/TIA-IS 968 and CS-03 Issue 8, Part III requirements.

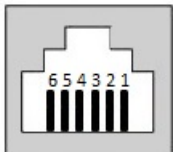

Pin #	Function
1	Not used
2	Not used
3	Ring
4	Tip
5	Not used
6	Not used

FXS Connections (RJ21X) for Mediatrix 4124 only

Pins 1 (ring) and 26 (tip) of the ribbon connector are considered position 1. Pins 2 (ring) and 27 (tip) are position 2. This pairing continues through 24 pairs.

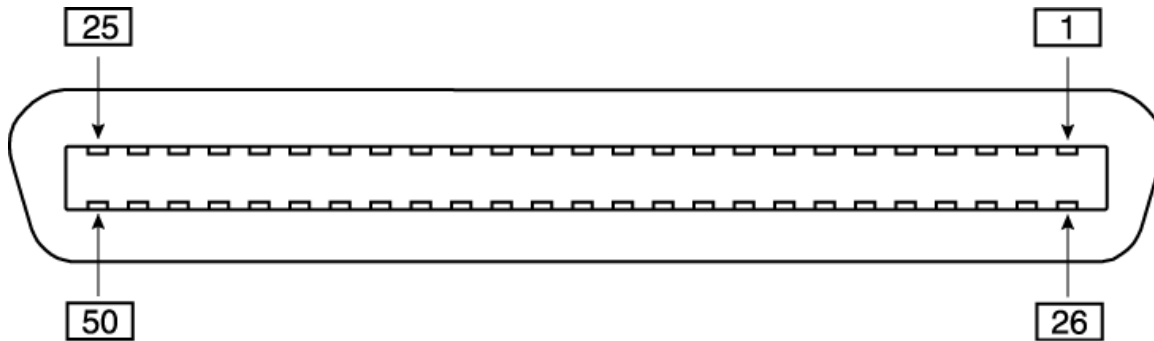

Line	Ring	Tip
1(with bypass)	pin1	pin26
2	pin2	pin27
3	pin3	pin28
4	pin4	pin29
5	pin5	pin30
6	pin6	pin31
7	pin7	pin32
8	pin8	pin33
9	pin9	pin34
10	pin10	pin35
11	pin11	pin36
12	pin12	pin37
13	pin13	pin38
14	pin14	pin39
15	pin15	pin40
16	pin16	pin41
17	pin17	pin42
18	pin18	pin43
19	pin19	pin44
20	pin20	pin45
21	pin21	pin46
22	pin22	pin47
23	pin23	pin48
24	pin24	pin49

Note: Pins 25 and 50 are not used.

Troubleshooting


Locating the Product Serial Number

Before you start

 **Warning:** Make sure your unit is powered off.

Steps

- 1) Flip the unit. The serial number is located underneath the unit.

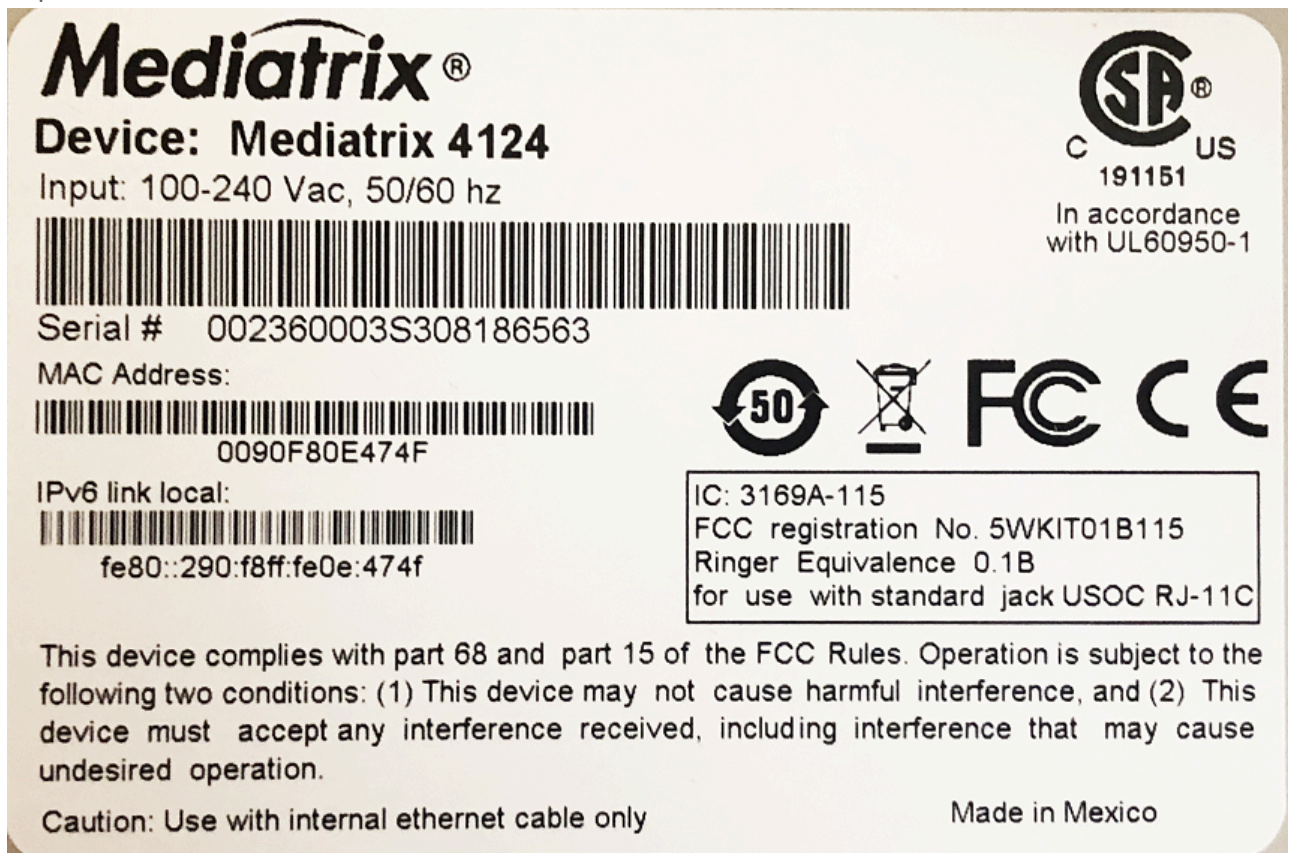

 **Caution:** Use with internal Ethernet cable only.

 **Warning:** Make sure your unit is powered off before flipping it over. Make sure all your cables are well connected.

- 2) Flip the unit and power the unit.

Troubleshooting

Problem	Cause
Unable to contact the Management Interface.	Wrong Eth port used for the Network configuration (Mediatrix unit on the edge or in the LAN with or without a DHCP server).
Card does not appear in the Management Interface.	- The card is broken. - The unit is broken.
Card appears in the Management interface, but cannot be used (For example, unable to make calls).	The card is not configured properly. Refer to the Software Configuration Guide.
Unable to contact the Management Interface via the CLI.	- CLI service not activated in the configuration. - Protocol used to contact the CLI not activated.
Unable to contact the unit via SNMP.	- SNMP service not activated. - Credentials do not grant access.
Unable to make calls, although cards appear in the Management Interface.	Hour and date are not synchronized (required by certificates).

LED Patterns

LED state	Description
All LEDs cycling from left to right, individually blinking 1 cycle per second, 33% duty	A firmware pack is being downloaded into the unit and written to persistent storage.
All LEDs blinking at 3 cycles per second, 50% duty. One LED out of two has a 180 degree phase. This pattern lasts for 8 seconds.	The download of the firmware has failed. After 4 seconds, the unit restarts.
Power and Ready LEDs blinking (synchronized) 1 cycle per second, 75% duty	The partial reset is completed.
Power LED blinking, 1 cycle per 4 seconds, 75% duty	Triggered when the unit is booting on the recovery bank and no update is pending.

LED state	Description
Power LED blinking green 3 cycles per second, 50% duty	Waiting for DHCP (IPv4 or IPv6) answer or IPv6 router advertisement or PPPoE connection. No Ip Address configured.
All LEDs blinking green, 3Hz, 50% duty	Waiting for DHCP (IPv4 or IPv6) answer or IPv6 router advertisement or PPPoE connection.
Ready LED OFF, all other LEDs cycling from right to left, left to right.	The unit tries to download and install a firmware given by the Network Rescue server.

RESET/DEFAULT Button

The **Reset/Default** button is a switch that can be used to perform a partial or factory reset while the unit is running.

In other words, the **Reset/Default** button can be used to:

- Cancel an action that was started.
- Revert to known factory settings if the Mediatrix unit refuses to work properly for any reason or the connection to the network is lost.
- Reconfigure a unit.

The **Reset/Default** button will generate different actions depending on the amount of time the button is held.

IMPORTANT: It is the LED pattern that will indicate the action that is being applied to the unit. The action will occur more or less rapidly depending on the platform.

LED Pattern	Action	Comment
Power1 blinking, all other LEDs OFF	Restarts the Mediatrix unit.	No changes are made to the Mediatrix unit settings.
All LEDs blinking, 1cycle per second, 50% duty	Initiates a Partial Reset of the Mediatrix unit. Note: The partial reset is optional as it can be disabled with the CLI Hardware.ResetButtonManagement parameter. For more details, refer to the DGW Configuration Guide - Reference Guide published on the Media5 Documentation Portal .	Restarts the unit in a known and static state while keeping most of the configuration unchanged.
All LEDs steady ON	Initiates a Factory Reset of the Mediatrix unit.	Reverts the unit back to its default factory settings.
All LEDs will become OFF after blinking and being steady on.	No action is taken. This is useful if you accidentally pushed the button and do not need and action to be applied.	The action is ignored.

Partial Reset

The partial reset provides a way to contact the Mediatrix unit in a known and static state while keeping most of the configuration unchanged.

A partial reset can be performed at the initial start-up of the Mediatrix unit or on a unit already in use where the configuration was modified in such a way that the user can no longer access the system by the Web page or otherwise. In both cases, the user can manage the Mediatrix unit through its Rescue interface, which is bound to the unit's WAN port (wan for the Mediatrix 4102S, and ETH1 for all other Mediatrix units). The IP address of the Rescue interface is 192.168.0.1 (IPv4) or an IPv6 Link Local address.. These connections give access to the Rescue Management Interface where the configuration of a new unit can be completed and where an existing configuration can be modified.

By default the Rescue Network Interface is disabled. When a partial reset is performed, the Rescue network Interface becomes enabled and the "Power" and "Ready" LEDs are blinking at 1Hz with 75% duty and all other LEDs are off. Once the configuration has been modified to solve the problem that required the partial reset, it is important to disable the Rescue Network Interface to make sure that you are no longer working in the Rescue Network Interface.

Performing a partial reset on a new unit will not modify the configuration, as it has not yet been modified to your needs. However, a partial reset performed on a unit already in use will:

- Rollback Local Firewall settings that are not yet applied.

- Add a Local Firewall rule to allow complete access to the Rescue interface.
- Rollback NAT settings that are not yet applied.
- Add NAT rule to allow complete access to the Rescue interface.
- Cancel the changes that were being modified but not yet applied to the configuration.
- Disable any Network Interface in conflict with the Network Rescue Interface.
- Configure and enable the Rescue Network Interface to:
 - use the link as the default value used by the Uplink Network Interface
 - set the IP address to 192.168.0.1 and the Network Mask to 255.255.255.0.
 - set the IPv6 link-local address on all network links. The IPv6 link-local address can be found underneath the unit.

A partial reset will also modify the following parameters and preserve the values below even after the Rescue interface has been disabled.

Note: These changes are valid when using a MX profile. If the Mediatrix unit is not using a MX profile, the default values and therefore the behaviour of the parameters may be different.

Service	Parameter	Default Value
AAA	Users.Password	User(s) from profile are restored with their factory password. All other usernames keep their password.
	Users.AccessRights	User(s) from profile are restored with their factory rights.
	ServicesAaaType (table)	Each service will be configured to use Local authentication and no accounting mechanism.
CLI	EnableTelnet	Disable
	TelnetPort	23
	EnableSsh	Enable
	SshPort	22
	InactivityTimeOut	15
HOC	ManagementInterface	Rescue
SNMP	Port	161
	EnableSnmpV1	Enable
	EnableSnmpV2	Enable
	EnableSnmpV3	Enable
Web	ServerPort	80
	SecureServerPort	443

Performing a Partial Reset

Before you start

Note: It is not recommended to access the unit on a regular basis through the Rescue Network Interface.

Important: Make sure the unit is connected to the WAN port, as the Rescue interface is bound to the unit's WAN port (wan for the Mediatrix 4102S, and ETH1 for all other Mediatrix units). The IP address of the Rescue interface is 192.168.0.1 (IPv4) or an IPv6 Link Local address.

Steps

- 1) When the Power LED is steady or blinking rapidly, insert a small unbent paper clip into the hole of the **Reset/Default** button located on the Mediatrix unit.

Note: The Power LED will start blinking.

- 2) Wait a few seconds.
- 3) When all LEDs are blinking, but before they stop blinking, remove the paper clip.

Note: You have between 7 to 11 seconds.

Result

The Rescue Network Interface is displayed when accessing the Management Interface. Several parameters and services are modified, refer to [Partial Reset](#). Do not forget to perform the [Disabling the Rescue Interface](#) step.

Disabling the Rescue Interface

Information

By default the Rescue interface is disabled. However, after a partial reset the rescue interface is enabled.

Important: The Rescue interface is bound to the unit's WAN port (wan for the Mediatrix 4102S, and ETH1 for all other Mediatrix units). The IP address of the Rescue interface is 192.168.0.1 (IPv4) or an IPv6 Link Local address.

Steps

- 1) Go to **Management/Misc.**
- 2) From the **Network Interface** drop-down menu, select the interface that will be used to manage the unit.

Important: If you keep the **Rescue Interface** selected, you will not be able to get into the management interface after disabling it.

- 3) Click **Apply**
- 4) Go to **Network/Interfaces.**
- 5) In the **Rescue Interface** table, from the **Activation** selection list, select **Disable**.

6) Click **Apply**.

Important: Make sure to reconfigure at least the user's authentication and firewall rules (if applicable), otherwise it may leave the unit unsecure.

Result

The unit will be reachable either on the new configured static IP address or on the DHCP .

Factory Reset

The Factory reset reverts the Mediatrix unit back to its default factory settings.

It deletes the persistent configuration parameters of the unit, including:

- User files stored in the File service
- Certificates, except for factory installed ones
- Log files of the File service

The Factory reset should be performed with the Mediatrix unit connected to a network with access to a DHCP server. If the unit cannot find a DHCP server, it will sent requests indefinitely. A Factory Reset can be triggered either:

- Directly on the unit. Refer to [Performing a Factory Reset](#) (p.32).
- Via the web interface of the Mediatrix unit (**Management/Firmware Upgrade**).
- Via the Command Line Interface of the Mediatrix unit by using the **fpu.defaultsetting** parameter.

Performing a Factory Reset

Information

The Factory reset alters any persistent configuration data of the Mediatrix unit.

Steps

- 1) Insert a small, unbent paper clip into the hole of the **Reset/Default** button, located on the Mediatrix unit.

Note: Do not release the **Reset/Default** button before the LEDs stop blinking and are steadily ON. This can last from 12 to 16 seconds. If you leave the inserted pin longer, no action will be taken which is useful if you accidentally pushed the button and do not need any action to be applied.

- 2) Release the paper clip.

Result

All configuration parameters are reset to their default value. The unit can then be contacted via its WAN interface DHCP-provided IP address (ETH1 or WAN on the 4102S), or via its LAN interface default IP address 192.168.0.10 (ETH2 or LAN on the 4102S).

Standards Compliance and Disclaimers

Supported Standards

Note: The standards compliance of the Mediatrix units are printed on the same sticker as the product serial number.

Category	Specification
Agency approvals	• Anatel • European Union • CE mark (Declaration of Conformity) • CSA • FCC
Safety standards	• UL 60950-1, Second Edition + Amd 1: 2011 • CAN/CSA-C22.2 No. 60950-1-07 + Amd 1: 2011 • Anatel Resolution 238: 2000 • IEC 60950-1: 2005 (2nd Edition) + Amd 1: 2009 (with all national deviations)
Emissions	• FCC Part 15: 1998 Class B • Resolution 442: 2006 • EN55022 (2006) Class B • EN61000-3-2 (2000) Harmonic current emissions • EN61000-3-3 (1995) Voltage fluctuations and flicker (with amendment A1)

Category	Specification
Immunity	EN55024: 1998 including the following (with amendments A1 and A2): • EN61000-4-2 (1995), ESD • EN61000-4-3 (1996), Radiated RF • EN61000-4-4 (1995), Burst Transients • EN61000-4-5 (1995), Surge • EN61000-4-6 (1996), Conducted RF • EN61000-4-11 (1995), Voltage Dips and Interruptions
Telecom	• FCC Part 68: Subpart D, January 31, 2001 • Industry Canada (CS-03, Issue 9, November 15, 2004)

Note:

Changes or modifications to your Equipment not expressly approved by Media5 voids the user's warranty. This device complies with Part 15 of the FCC Rules and RSS-213 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules and RSS-213 of Industry Canada. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Disclaimers

Innovation, Science and Economic Development Canada (ISED)

This Class digital apparatus complies with Canadian ICES-003.

CE Marking



DECLARATION OF CONFORMITY

We, Media5 Corporation, located at 4229 Garlock st. Sherbrooke, Québec, Canada J1L 2C8, declare that for the hereinafter mentioned product the presumption of conformity with the applicable essential requirements of Directives 2014/30/EC and 2014/35/EC European parliament (EMC and LVD directives)is given. Any unauthorized modification of the product voids this declaration. For a copy of the original signed Declaration Of Conformity please contact Media5 at the above address.

RoHS Declaration Of Compliance

This Mediatrix unit is in compliance with the Council Directives 2011/65/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

RoHS China

Model M complies with the China IEC 60950-1 safety deviation, but does not have CCC approvals.

这个文件涉及的是在中华人民共和国境内进口或销售的电子信息产品
Include this document with all Electronic Information Products
imported or sold in the People's Republic of China.

部件名称 (Parts)	有毒有害物质或元素 (Hazardous Substance)					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr ⁶⁺)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
塑料和聚合物部件 (Plastic and Polymeric parts)	0	0	0	0	x	x
集成电路 (Integrated Circuit)	x	0	x	0	x	x

0: 表示该有害物质在该部件所有均质材料中的含量均在 SJ/T-11363 - 2006 规定的限量要求以下。
Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T-11363 - 2006 standard.

x: 表示该有害物质至少在该部件的某一均质材料中的含量可能超出 SJ/T-11363 - 2006 规定的限量要求。
Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts might exceed the relevant threshold of the SJ/T-11363 - 2006 standard.

除非另外特别的标注,此标志为针对所涉及产品的环保使用期限标志。某些可更换的零件会有一个不同的环保使用期限(例如,电池单元模块)贴在其产品上。
此环保使用期限只适用于产品是在产品手册中所规定的条件下工作。

The Environmentally Friendly Use Period (EFUP) for all enclosed products and their parts are per the symbol shown here, unless otherwise marked. Certain field-replaceable parts have different EFUP (for example, battery modules) and so are marked to reflect such.
The Environmentally Friendly Use Period is valid only when the product is operated under the conditions defined in the product manual.

Altitude of Operation



仅适用于海拔2000m 以下地区安全使用"或类似的警告语句 Use only at altitudes no more than 2000 m above sea level.



Only use in non-tropical climate regions.

Product Disposal Instructions

	This symbol indicates that the product is classified as electrical or electronic equipment and should not be disposed of along with commercial or household waste at the end of its working life. For appropriate disposal and recycling instructions, contact your local Media5 Corporation provider.
The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) was established by the European Union to minimize negative impact on the environment, control hazardous substances, and curtail landfill expansion by using the best available recovery and recycling techniques.	

DGW Documentation

Mediatrix devices are supplied with an exhaustive set of documentation.

Mediatrix user documentation is available on the [Media5 Documentation Portal](#).

Several types of documents were created to clearly present the information you are looking for. Our documentation includes:

- **Release notes:** Generated at each GA release, this document includes the known and solved issues of the software. It also outlines the changes and the new features the release includes.
- **Configuration notes:** These documents are created to facilitate the configuration of a specific use case. They address a configuration aspect we consider that most users will need to perform. However, in some cases, a configuration note is created after receiving a question from a customer. They provide standard step-by-step procedures detailing the values of the parameters to use. They provide a means of validation and present some conceptual information. The configuration notes are specifically created to guide the user through an aspect of the configuration.
- **Technical bulletins:** These documents are created to facilitate the configuration of a specific technical action, such as performing a firmware upgrade.
- **Hardware installation guide:** They provide the detailed procedure on how to safely and adequately install the unit. It provides information on card installation, cable connections, and how to access for the first time the Management interface.
- **User guide:** The user guide explains how to customise to your needs the configuration of the unit. Although this document is task oriented, it provides conceptual information to help the user understand the purpose and impact of each task. The User Guide will provide information such as where and how TR-069 can be configured in the Management Interface, how to set firewalls, or how to use the CLI to configure parameters that are not available in the Management Interface.
- **Reference guide:** This exhaustive document has been created for advanced users. It includes a description of all the parameters used by all the services of the Mediatrix units. You will find, for example, scripts to configure a specific parameter, notification messages sent by a service, or an action description used to create Rulesets. This document includes reference information such as a dictionary, and it does not include any step-by-step procedures.

Copyright Notice

Copyright © 2021 Media5 Corporation.

This document contains information that is proprietary to Media5 Corporation.

Media5 Corporation reserves all rights to this document as well as to the Intellectual Property of the document and the technology and know-how that it includes and represents.

This publication cannot be reproduced, neither in whole nor in part, in any form whatsoever, without written prior approval by Media5 Corporation.

Media5 Corporation reserves the right to revise this publication and make changes at any time and without the obligation to notify any person and/or entity of such revisions and/or changes.



media5corp.com